



Operation Manual

Liquid-Air Cooling Unit LA 5000



Version 1.2

Laird Thermal Systems s.r.o.
Prumyslová 497
462 11 Liberec
Czech Republic

Phone: +420 488 575 111

Protection Notice

Dissemination as well as copying of this document, utilization or posting of its contents is not permitted unless formally granted. Violations entail claims for compensation. All copyrights, including rights due to patent grant or registration of a utility model or design, are reserved.

All product names used in this manual are trademarks of the corresponding manufacturers.

Technical modifications are subject to change.

Table of Contents

1	About this Manual	6
1.1	Terms of Guarantee.....	6
1.2	Contact Information.....	7
2	Product Identification.....	8
2.1	Unit Specifications.....	8
2.2	Identification Plate	8
3	Safety Regulations.....	9
3.1	Hazard classes.....	9
3.2	Safety Symbols	9
3.3	Hints for Safe Operation	10
3.3.1	Prevent Hazards	10
3.3.2	Hints Regarding the Electrical Equipment	10
3.3.3	Environmental Issues.....	11
3.4	Safety Equipment.....	11
3.4.1	Safety and Signalling Equipment included in the Unit.....	11
3.4.2	Guards.....	12
3.4.3	Caution Labels	12
3.5	In Case of Accidents.....	13
4	Product Description	14
4.1	Intended Use	14
4.2	Use not in Conformance with the Intended Use	14
4.3	Unit Components.....	15
4.4	Specifications.....	16
4.5	Setting-up Requirements.....	17
4.5.1	Installation Location.....	17
4.5.2	Environmental Conditions	17
4.5.3	Infrastructure	17
5	Transport.....	18
5.1	Safety Indications for Transportation and Setting-up.....	18
5.2	Transportation of the Unit.....	18

5.3	Unpacking.....	18
6	Initial Operation.....	19
6.1	Safety Indications Related to Initial Operation	19
6.2	Setting to Work	19
6.2.1	Placement	19
6.2.2	Cooling Circuit Connection and Filling.....	20
6.2.3	Electrical Connections	21
6.2.4	Carrying out Setting to Work.....	22
6.3	Daily Start-up	23
6.4	Setting to work after Storage	23
7	Controlling the Unit	24
7.1	Safety Indications for Controlling the Unit	24
7.2	Switching on the Unit	24
7.3	Switching off the Unit	24
7.4	Settings.....	25
8	Disruptions.....	27
8.1	Disruption in Operation.....	27
8.1.1	Trouble Shooting.....	27
9	Maintenance and Cleaning	28
9.1	Maintenance Schedule.....	28
9.2	Cleaning of Heat Exchanger.....	28
9.3	Refilling of Coolant.....	28
9.4	Cleaning of Strainer.....	29
9.5	Cleaning of Unit Casing	30
10	Repair	31
10.1	Repair of unit.....	31
11	Dismounting, Disposal, Storage.....	32
11.1	Temporary Placing out of Operation.....	32
11.2	Drain of unit	33
11.3	Re-packaging of the unit.....	33
11.4	Storing the Unit.....	33
11.5	Disposal.....	33

11.6 Disposal of Operating Materials..... 33
 11.7 Return of the unit to LAIRD THERMAL SYSTEMS 34

12 Wear Parts and Spare Parts 35
 12.1 Units wear and spare parts 35

Addendum 37
 Flow scheme 37
 Wiring diagram..... 38
 Dimensional drawing..... 39
 Performance diagram 40
 Flow versus pressure 41

History of Changes, Document No. 387009851

Date	Index	Reason for Change	Name	Page
09-August-2022	V 1.0	Document number changed from 337007274 to 387009351.	Peter Larsson	
01-Sep-2022	V 1.1	Adding ce-marking. Change spare parts list	Peter Larsson	
07-Sep-2022	V 1.2	Change spare part list	Peter Larsson	

1 About this Manual

This Operational Manual addresses the needs of the user of the unit. Its intention is to allow the safe operation of the unit. Thus, it should be read carefully and be kept in a space accessible for the users of the unit at any time.

All chapters of this Operation Manual can be read independently and thus can be used for look-up purposes.

1.1 Terms of Guarantee

General sale and delivery terms of LAIRD THERMAL SYSTEMS apply. The buyer accepts these terms, at the latest when signing the contract of purchase.

The particular terms of guarantee and duration of guarantee of the unit in question can be taken from the contract documents as well as from the order confirmation.

Warranty claims and liability are excluded in case of one of the following situations:

- Use of the unit in an unintended way
- Inaccurate installation, putting into service, operation, repair or maintenance of the product by people that are not fully authorized
- Use of the product despite of defect, wrongly implemented or non-functional safety units or protective gear
- Unauthorized or forbidden modifications by the user concerning the electrical equipment of the unit
- Unauthorized or forbidden modifications by the user concerning the mechanical structure of the unit
- Unauthorized or forbidden modifications by the user concerning the operating parameters
- Use of unauthorized tools
- Use of unauthorized operating supplies
- Exceedance of mandatory maintenance intervals
- Cases of disaster caused by foreign matter influence or act of nature beyond control

PLEASE NOTE

Any form of unintended use of the unit and any structural change caused by the user without prior authorization in written form by LAIRD THERMAL SYSTEMS will lead to the termination of warranty as well the termination of the declaration of conformation and will free LAIRD THERMAL SYSTEMS from product liability. This concern includes safety devices as well.

In case of authorized changes or when adding optional equipment, it is the sole responsibility of the customer to assure the accurate implementaion of the required safety devices.

1.2 Contact Information

If you have questions with respect to this unit, please use the contact information given below. Always communicate the following:

- Your name and address
- Name of contact at your address
- Product data as on identification plate: Type of unit, serial number and year of manufacture

Company contact:

Post: Laird Thermal Systems s.r.o.
Prumyslová 497
462 11 Liberec
Czech Republic

Tel: +420 488 575 111

Fax: +420 488 575 303

E-Mail: info-lcs@lairdthermal.com

Homepage: www.lairdthermal.com

2 Product Identification

2.1 Unit Specifications

Manufacturer	Laird Thermal Systems s.r.o
Type of product	Liquid-air cooler
Type of unit	LA 5000
Article number	387009381

Table 1: Unit specifications

2.2 Identification Plate

The identification plate is attached to the front side of the unit (see Fig. 1).



Fig. 1: Position of identification plate

1	Identification plate
---	----------------------



Fig. 2: Unit specific identification plate

1	Unit type	2	Article number
3	Serial number	4	Electrical specifications
5	Date of manufacture		

3 Safety Regulations

3.1 Hazard classes

In this document safety instructions are using standardized representation and symbols. Depending on the probability of their incidence and the severeness of consequences three hazard classes are used.



DANGER

Reference to direct danger for humans.
Inobservance will lead to irreversible injuries or exitus.



CAUTION

Reference to noticeable danger for humans or possible damage to property.
Inobservance may lead to reversible injuries or to damage to property.

3.2 Safety Symbols

In this Operation Manual concrete safety instructions are given in order to point out unpreventable residual risks when operating the unit. These risks include danger for

- Human beings
- The unit and other equipment
- The environment

The safety symbols used in this manual are indicated below. The main reason for their use is to point the reader to the safety instruction given in the text field beside.



Symbol	Meaning
	Warning with respect to general danger or damage to property
	Warning with respect to electrical hazard

Table 2: Warning signs


Symbol	Meaning
	This symbol indicates that disconnecting from mains is required.

Table 3: Signs giving orders

3.3 Hints for Safe Operation

PLEASE NOTE

Conduct inspections on a regular time base!

This will ensure that the appropriate measures will be carried out indeed.

The unit is operational save. It was built according to the existing state of technology.

Despite this the unit could cause hazards if it

- is used in a way it was not intended for
- is used improperly
- is operated under unsuitable conditions

3.3.1 Prevent Hazards

Hazards can be prevented by safety-conscious and anticipatory behaviour of staff.

Everybody working with the unit should keep the following in mind:

- Make this Operation Manual available for everybody at the operational location of the unit in a complete and perfectly readable form!
- Use the unit exclusively for what it was intended!
- The unit must be operational and errorfree. Check the condition of the unit before working with it and within a regular time frame!
- Make sure that nobody can injure himself by any part of the unit!
- Any disruption or recognizable change concerning the unit should be reported to the responsible person!
- Stick to the accident prevention regulations as well as any regional regulations!
- Unit must be unplugged from mains before it is opened!

3.3.2 Hints Regarding the Electrical Equipment



DANGER

Danger to life through electrical shock when working on the electrical equipment of the unit!



- Switch off the unit before starting your work!
- Disconnect the unit from mains by pulling the mains plug!
- Verify that the installation is dead (volt-free)!
- Carry out earthing or short circuiting!

When working on electrical installations the following principles should be observed:

- Works on the electrical installations may only be accomplished by qualified electrical staff!
- When connecting electrical equipment to mains regional regulations have to be observed. Be aware of the information in the wiring diagram!
- The unit is powered by electricity. Electrical shock hazard exists, if the electrical installations are defective or the insulation fails during operation.
- When switched off the unit is not disconnected from mains. This is only the case when the mains plug is pulled.
- Any changes regarding the control elements of the unit can have an influence on the safe operation. All intended changes must be authorized by the manufacturer.
- After the implementation of a change the operativeness of the safeguards must be verified.

- No unauthorized changes on the unit are allowed. All intended changes must be authorized by the manufacturer.

3.3.3 Environmental Issues

Environmentally conscious and anticipatory behaviour of staff avoids environmentally hazardous impacts. The following principles apply for environmentally conscious behaviour:

- Environmentally hazardous substances must not get into the ground or the drains. They should be kept in appropriate containers.
- Environmentally hazardous substances must be fed to utilization or disposal according to regional regulations.

When dealing with operating supplies always keep aware of the safety data sheet of the corresponding manufacturer.

3.4 Safety Equipment

PLEASE NOTE


The safety equipment listed below must be integrated in the local control environment by the customer, unless otherwise noted. These works must be carried out only by trained experts. All required information can be taken from the wiring diagram shown in the addendum.

Safety equipment must not be modified, removed or taken out of operation. All parts of the safety equipment must be accessible at all times.

3.4.1 Safety and Signalling Equipment included in the Unit

The unit is equipped with safety equipment at critical spots (see Fig. 2)

- The Liquid throughput is controlled by a flow control device that must be integrated in the potential-free safety circuit of the device to be cooled.
- The maximum temperature of the cooling circuit is controlled by a thermostat with an opener contact that must be integrated into the safety circuit of the device to be cooled.
- The maximum pump pressure is limited by a safety valve that by-passes the liquid stream when the pressure pre-set is exceeded.
- The minimum coolant level in the tank is secured by a level sensor.

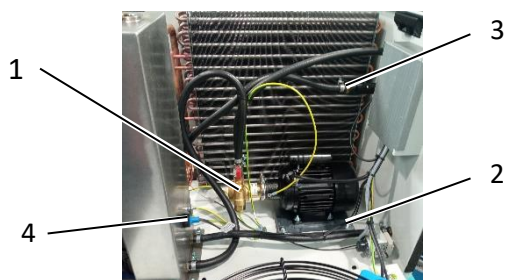

1	Safety valve	2	Thermostat
3	Flow control device	4	Level sensor

Fig. 3: Safety equipment

3.4.2 Guards

Direct access to hazardous parts or areas of the unit is restricted by the unit cover. The cover may only be removed for the purpose of maintenance or repair works and shall be replaced prior to taking the unit back into operation. Before any of unit's cover is open the power input must be disconnected. The back panel with fan can be removed independently from the main cover by opening 7 screws. The unit cover is fixed by 7 screws. The electrical terminal area is accessible after removing the corresponding plate on the front side held by two screws. For unscrewing/screwing or opening/closing of the fasteners a 7.0 x 1.0 mm slotted screwdriver is required.



Fig. 4: Guards

1	Unit cover	2	Access plate for electric terminal block
3	Removable side panel		

3.4.3 Caution Labels

Danger spots on the unit are indicated corresponding to German safety regulation BGV A8 "Sicherheits- und Gesundheitsschutzkennzeichnung am Arbeitsplatz".

Caution labels on the unit must be easily readable at all times. Illegible caution labels must be exchanged without delay.



Fig. 5: Caution labels on the unit

1	Hint on electrical hazardous area behind access plate
---	---

3.5 In Case of Accidents

Should you or another person be injured when working with the unit:

- Stay calm!
- Render first aid!
- Call the company first-aider without exception!

4 Product Description

4.1 Intended Use

The liquid-air cooler LA 5000 is used for the cooling of a liquid circuit. As a coolant water or a water/glycol mixture may be used. The coolant circulates between the cooling unit and the device to be cooled. It is re-cooled by an air-cooled heat exchanger. The maximum cooling capacity depends on the difference between the ambient temperature and the temperature of the coolant forward flow. Its value is 5000 Watt for a temperature difference of 12 K.

The unit is exclusively intended for use in industrial and commercial environments.

The intended use also includes the observance and following of all hints given in this Operation Manual.

4.2 Use not in Conformance with the Intended Use

Operation of the unit under improper operational conditions is not allowed, since otherwise the operation safety can not be granted.

When using the unit in a way not compliant with the intended use, hazardous situations may occur.

Operation of the unit is not allowed under the following conditions:

- The unit is used for a purpose other than the one it is intended for.
- The unit or parts of it are damaged, the electrical installation is not correct or the insulation is broken.
- Protective or safety equipment is not functional or defect, improperly installed or missing.
- The unit is not working properly.
- Controlling devices were modified in a way that is not permitted.
- Operational parameters were changed in a way that is not permitted.
- Operation in areas exposed to explosion hazards
- Operation with cooling media not according to specification
- Use of unauthorized tools
- Exceedance of the compulsory maintenance intervals

PLEASE NOTE

The manufacturer is not liable for damage occurring when using the unit in a way it was not intended for. When using the unit in a way it was not intended for, the manufacturer's warranty given by LAIRD THERMAL SYSTEMS will expire.

4.3 Unit Components

Additional information can be retrieved from the flow scheme shown in the addendum. The unit consists of the following main components:

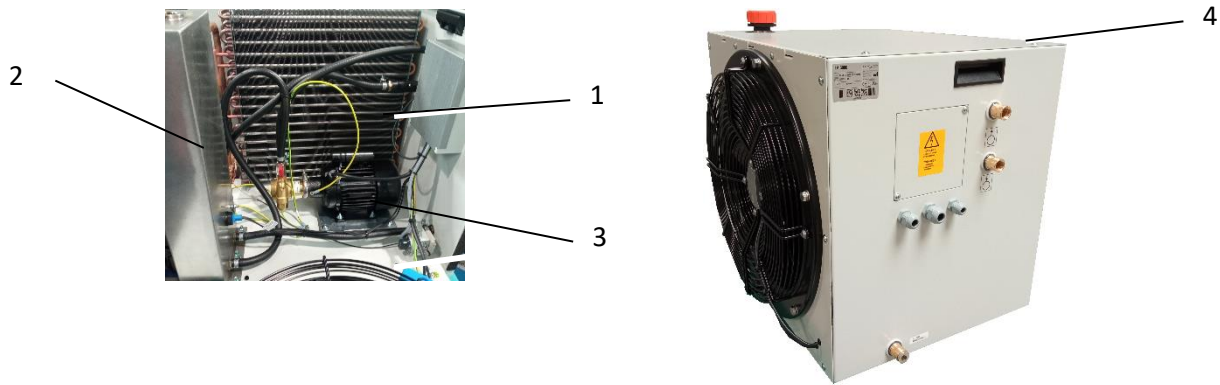


Fig. 6: Main components

1	Heat exchanger	2	Tank for coolant
3	Pump	4	Casing

Cooling Circuit

In the cooling circuit the coolant is driven by the pump to the device that is to be cooled and back via the return flow. The heat is dissipated into the ambient air by an air-cooled heat exchanger. Exceedance of the maximum pump pressure is prevented by a by-pass circuit.

The liquid temperature is controlled by an electric thermostat, whereas liquid throughput is controlled by a flow control device. Both indications are made potential-free and must be integrated into the safety circuit of the device to be cooled.

4.4 Specifications

Dimensions and weight

Length:	421 mm
Width:	537 mm (w/o hose nipples)
Height:	480 mm
Weight:	40 kg (empty)
Coolant capacity:	6.2 liter
Coolant:	Water or water (70%) / glycol (30%)

Table 4: Dimensions and weight

Performance data

Cooling capacity:	5.0 kW (100% Water)
Throughput:	> 6.0 lpm at 6.0 bar
Noise level @ 1m:	57dB(A) (50Hz)

Table 5: Performance data

Environmental conditions

Operating temperature:	+5°C ... +50°C (Water)
Operating temperature:	-10°C ... +50°C (Water 70%/Glycol 30%)
Operating relative humidity:	20% ... 80%
Storage temperature:	-25°C ... +70°C (Empty)
Storage relative humidity:	10% ... 95%

Table 6: Environmental conditions

Settings

Flow control device	4.0 ± 0.1 lpm (opening threshold)
Thermal switch	55°C ± 5°C tolerance, 15°C hysteresis
Maximum pressure	10.0 ± 0.5 bar

Table 7: Settings

Electrical characteristics

Mains voltage:	230±10% VAC, 1Ph, 50/60 Hz
Current draw:	3.3 A
Customer main fuse:	5 A T
Safety circuit, max input	230VAC, 0,5A, 15W 100VDC, 0,5A, 10W

Table 8: Electrical characteristics

4.5 Setting-up Requirements

4.5.1 Installation Location

- The location must be even.
- When choosing the installation location the following must be kept in mind: the air flow of the cooling air must not be restricted, forward and back flow connections must be easily accessible and all tubes must be installed without sharp bends.

4.5.2 Environmental Conditions



CAUTION

Risk of damage through unsuitable environmental conditions.

Damage to property and corrosion damage may result and are not covered by manufacturer's liability.

- The unit is only authorized for use in indoor environments.
- The unit must not be stored or operated in aggressive, humid environments.
- The unit must not be stored or operated outdoor.

Pay attention to the environmental conditions as given in the specifications on page 16.

4.5.3 Infrastructure

The following infrastructure is required for connecting the unit:

Parameter	Rated value
Operating voltage	230±10% VAC, 1Ph, 50/60 Hz

Table 9: Required infrastructure

5 Transport

5.1 Safety Indications for Transportation and Setting-up

 **CAUTION**

Risk of injury by lifting the unit!

The weight of the unit is almost 40 kg.

- Do not lift the unit manually!
- Always use proper auxiliary means such as a forklift or a jack lift!

5.2 Transportation of the Unit

The unit is delivered shrinked in foil on a transportable pallet. Leave the unit on the pallet until bringing it into service. Use a forklift or jack lift for transportation to the installation location.

5.3 Unpacking

Remove the foil before setting up the unit!

Inspect the unit with regards to:

- Damage caused by transportation
- Completeness of delivery

Lift the unit with a forklift or jack lift off the transportable pallet.

Dispose of the packaging material in accordance with regional regulations.

PLEASE NOTE

LAIRD THERMAL SYSTEMS advises to keep the transportable pallet for later transportation of the unit.

6 Initial Operation

6.1 Safety Indications Related to Initial Operation

CAUTION

Danger of malfunction caused by faulty connections during initial operation!

Before switching on the unit make sure that

- all safety equipment of the unit is implemented and functional
- all connections were properly made

Please follow the rules in chapter Safety Regulations on page 9.

6.2 Setting to Work

6.2.1 Placement



Fig. 7: Minimum clearance for air entrance and air exit

1	Ventilation grid
---	------------------

- 1) Move the unit to its installation location as mentioned in chapter 5.2.
- 2) Place the unit in a way that air entrance and air exit are not obstructed. Wall clearance must not be less than 0.5 m, otherwise cooling capacity may be restricted. Unit should not be installed in a corner as hot air can be recirculated into the cooler.

PLEASE NOTE

In case of storage of the unit at temperatures lower than 5°C or higher than 40°C for longer periods please wait 3 hours prior to initial operation to allow for temperature adjustment.

6.2.2 Cooling Circuit Connection and Filling

CAUTION

Risk of damage by using improper cooling hoses!

This may lead to damage to persons, damage to the unit or corrosion damage.

- When choosing cooling hoses pay attention to sufficient burst strength and compatibility with coolant!
- Only use cooling hoses without any signs of damage!

The cooling hoses with an internal diameter of 9 mm are connected to the unit by means of hose nipples. Liquid outlet and liquid inlet are indicated with respective symbols.

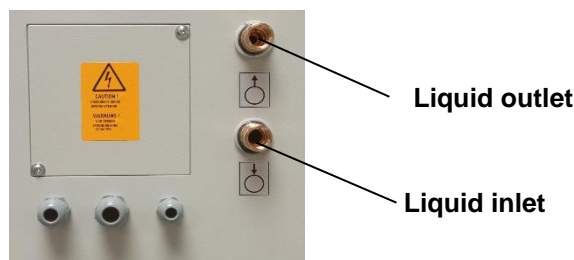


Fig. 8: Labeling of liquid inlet and liquid outlet

- 1) Connect a suitable hose to the hose nipples for liquid inlet and liquid outlet and secure it with a clamp respectively.
- 2) Connect the hoses to the corresponding nipples of the device to be cooled.

PLEASE NOTE

When connecting the cooling hoses pay attention to flow direction. Follow the documentation released by the manufacturer of the device to be cooled.

Transparent hoses stimulate algae growth that may increase the error-proneness of the components built into the unit. Thus only use non-transparent hoses.

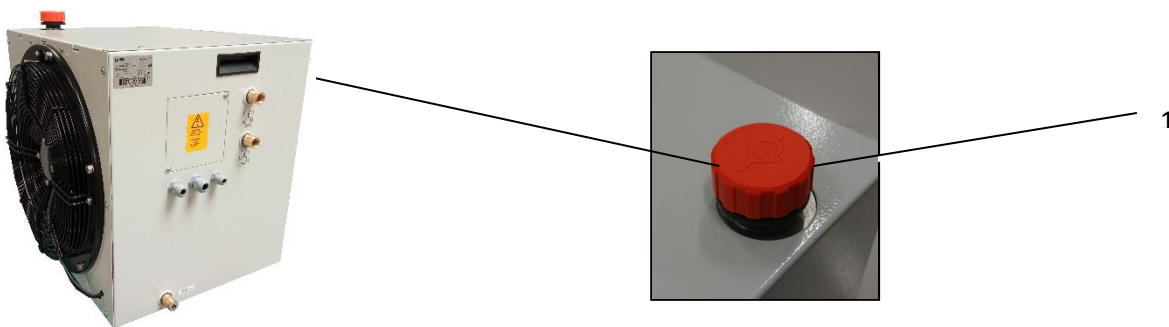


Fig. 9: Cap of coolant container

1	Cap
---	-----

- 3) Open the coolant container by removing the cap.
- 4) Fill the coolant container with about 3.7 liters of water or water/glycol mixture.
- 5) Open drain cap and ensure drain hose are filled with coolant.
- 6) Close drain cap.
- 7) Close the coolant container by fitting the cap.

6.2.3 Electrical Connections



DANGER

Danger to life through electrical shock when working on the electrical equipment of the unit!



- Switch off the unit before starting your work!
- Disconnect the unit from mains by pulling the mains plug!
- Verify that the installation is dead (volt-free)!
- Carry out earthing or short circuiting!



CAUTION

Risk of damage through improper connections!

Improper integration of the unit into the safety circuit of the device to be cooled will lead to the inoperativeness of the safety equipment listed in chapter 3.4.1 on page 11.

- All connections required must be incorporated according to the wiring diagram shown in the addendum.
- Ensure yourself that all connected safety equipment is properly functioning.
- All works should be carried out only by expert.

PLEASE NOTE

The unit is delivered without a mains cable. The electrical connection as well as the integration into the safety circuit of the device to be cooled are the customer's responsibility and must be accomplished by expert staff.

Required information can be drawn from the specifications listed on page 16 and the wiring diagram in the addendum.



Fig. 10: Electrical connections and terminal behind access plate

1	Electric terminal stripe	2	Earth bolt M5
3	Access plate	4	Cable bushings

- 8) Remove the access plate after unscrewing the 2 screws.
- 2) Feed the mains cable through one of the cable bushings and make the connection to the terminal. Then do the same with the wires for the implementation of the safety circuit.
- 3) Remount the access plate.

After installation of the mains cable connect the unit to mains by inserting the mains plug or making a mains connection as required by the particular situation.

6.2.4 Carrying out Setting to Work

After connecting the cooling circuit, filling the coolant container and finishing the electrical connections follow the steps below for setting the unit to work:

- 1) Remove the cap on the coolant container.
- 2) Switch on the unit and let it run for about 10 minutes in order to fill and vent the cooling circuit. Continuously check the filling level during this procedure.



CAUTION

Lack of coolant may destroy the pump!

When looking into the filling plug of the coolant container the filling level must always be above the heat exchanger fins.

- 3) If required, refill coolant.
 - 4) Check the compliance with the operational parameters as specified on page 16.
 - 5) Remount cap on coolant container.
 - 6) Switch off the unit.
- ⇒ The unit is ready for operation.

6.3 Daily Start-up

Switch on the unit about 1 minute prior to using the equipment that is to be cooled.

6.4 Setting to work after Storage

Setting to work after storage will have to follow the same procedures as required for initial operation (see chapter 6.2).

7 Controlling the Unit

The unit is controlled using the controls of the equipment that is to be cooled.

All alarm and error signalling is only indicated on the control panel of the equipment that is to be cooled.

7.1 Safety Indications for Controlling the Unit



CAUTION

Lack of coolant may destroy the pump!

- Operate the unit only when the filling of coolant container is sufficient!
- Check the filling level of the coolant container regularly!

Also pay attention to the hints given in the chapter Safety indications on page 9.

7.2 Switching on the Unit

- The unit is ready for switching on.
- 1) Switch on the unit about 1 minute prior to operation of the device to be cooled using the appropriate control of that device.
- 2) Check the compliance with the operational data according to the specifications listed on page 16.
- ⇒ The unit is running.

7.3 Switching off the Unit

- Cooling operation has come to an end.
- 1) Switch off the unit using the control of the device to be cooled.
- 2) Close all valves that may exist in the extension of the hoses running to and from the unit.
- ⇒ The unit is out of operation.

7.4 Settings



CAUTION

Mains must be unplugged before unit is opened!

- Fan may start and there is a risk of injuries!

PLEASE NOTE

The flow control device and the by-pass valve are set according to specification and sealed. Any modifications to these settings lie in the sole responsibility of the customer and must only be carried out by expert staff.

The adjustment of the flow control device should not be made without the help of proper measuring equipment, as the switching point must be set in a controlled way. Otherwise the function of the safety circuit might not be reliable and, as a result, the device to be cooled might get damaged.

Flow control device

Before adjusting the flow control device, the fan's power must be disconnected!


The flow control device contains a closing contact whose OFF threshold is pre-set to a throughput of 4.0 litres per minute. For setting the switching point the switch head has to be adjusted. For that purpose the screw retained by red locking varnish must be released and the switching head must be moved while the throughput change is monitored by means of the equipment implemented for that purpose. After setting the switching point the head fixing screw must be tightened firmly again.

By-pass valve

The by-pass valve is set by the manufacturer to a maximum pressure of 9 bars. If any modification to this setting should be required, please contact the LAIRD THERMAL SYSTEMS service department to receive briefing.

Before adjusting the flow control device, the fan's power must be disconnected!

Setting the Thermostat

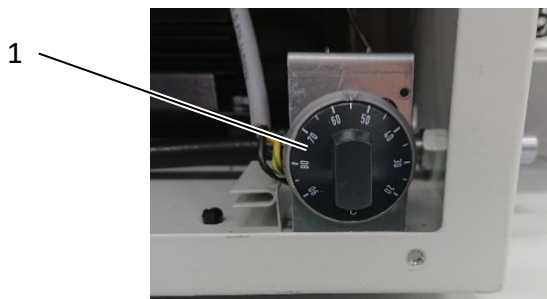

Thermostat

1	Knob of thermostat
---	--------------------

The unit is delivered by the manufacturer with the thermal switch being set to 55°C. The thermal switch can be adapted to meet changing needs.

Increase the temperature setpoint

- 1) Turn the knob clockwise.
- ⇒ The switch-off temperature is set to a higher value.

Decrease the temperature setpoint

- 2) Turn the knob counterclockwise.
- ⇒ The switch-off temperature is set to a lower value.

8 Disruptions

8.1 Disruption in Operation

The most common reason for disruption in operation of the unit is improper maintenance. Maintenance should be carried out regularly according to the intervals defined in chapter 9 on page 26.

In case of disruption start with checking the following:

- Fan polluted or blocked?
- Coolant polluted?
- Low coolant contents because of leakage, evaporation or an extended cooling circuit with long hoses?

More help can be found in the following paragraph.

In case you do not succeed in identifying the problem cause by means of this manual please contact the service department of LAIRD THERMAL SYSTEMS.

8.1.1 Trouble Shooting

For trouble shooting you may rely on the following:

- Alarm signalling within the safety circuit of the device to be cooled
- Wiring diagram
- Flow scheme
- Trouble shooting table given below

Problem	Possible reason	Countermeasure
The unit does not start	Electrical connection not correct or no mains connection	Check connection, insert mains plug, check main power switch
The unit is running, but cooling capacity is not available or too low	External hoses sharply bent?	Pay attention to smooth bends, when hoses are connected
	Unit properly located?	Clearance to walls not less than 0.5 m
	Is there flow in cooling circuit?	Flow is signalled potential-free by the safety equipment of the unit and can be visualized in the range of controls of the device to be cooled.
	Contents in coolant container low	Check coolant level, refill coolant if necessary → page 22
	Fan turning?	Cover the ventilation grid next to the fan with a sheet of paper. If the paper is sucked and hold by the airflow, the fan works properly.
	Ambient temperature too high?	Check specifications → page 16
Noisy unit	Contents in coolant container low	Refill coolant

Table 10: Trouble shooting list

9 Maintenance and Cleaning

Diligent maintenance is the prime factor for assuring an error-free and efficient operation of the unit. Operating personnel can perform these tasks when properly trained.

9.1 Maintenance Schedule

Device	Activity	Interval	Criteria	Tools	Performer
Heat Exchanger	Clean	Minimum weekly (if required, daily)	Plate fins and ventilation grids not polluted	Slotted screw driver 7 x 1 mm, compressed air, vacuum cleaner	Operating personnel
Coolant container	Check filling	Weekly	Coolant level well above mesh	Visual inspection	Operating personnel
Strainer	Clean, replace if required	Every 3 months, more often when coolant polluted	Strainer undamaged and clean	Metric AF24 wrench, cloth or vessel	Operating personnel

Table 11: Maintenance schedule

9.2 Cleaning of Heat Exchanger

Cooling capacity is heavily reduced, if the heat exchanger is polluted. The heat exchanger must be checked for pollution regularly and be cleaned if required.

For cleaning the heat exchanger follow these steps:

- 1) Disconnect the unit from mains.
- 2) Remove the side panel and the unit cover.
- 3) Clean the heat exchanger using compressed air opposite to the direction of air entrance into the unit (i.e. from the inside out). Be careful in order not to damage the plate fins.
- 4) Remove any pollution from the ventilation grid and the side panel using a vacuum cleaner.
- 5) Remount the unit cover and the side panel.

⇒ The unit is ready for operation.

9.3 Refilling of Coolant

Since the cooling circuit is an open circuit, evaporation of coolant may occur. Thus the filling level of the coolant container has to be checked regularly and coolant might have to be refilled as described on page 22.

9.4 Cleaning of Strainer



Fig. 11: Locations of ball valve and strainer

1	Strainer cover	2	Ball valve
---	----------------	---	------------

- 1) Disconnect the unit from mains.
- 2) Remove the side panel.
- 3) Close the ball valve.



CAUTION

A small amount of coolant will leak from the pump.
Use a cloth or an appropriate vessel for absorption.

- 4) Remove the strainer cover using a metric AF24 wrench.
- 5) Take off the strainer and clean it. In case of damage the strainer must be replaced.
- 6) Remount the strainer and screw on the cover.
- 7) Re-open the ball valve.
- 8) Should any coolant leak from the strainer the cover must be screwed on using a little more force.
- 9) Remount the side panel.



CAUTION

Risk of damage to the pump, if the unit is operated with a fully closed ball valve!
Never start the unit, when the ball valve is closed.

- 10) Start-up the unit for venting the cooling circuit (see page 22).
- 11) Check the coolant level and refill, if required.

9.5 Cleaning of Unit Casing



CAUTION

Risk of damage through use of improper cleansing material.

When using aggressive or abrasive cleaning agents corrosion may occur as result of a damaged paint film.

- For cleaning the unit casing only use mild cleaning agents (e.g.dish washing detergents)!
- Use clean and lintless cloth for cleaning!

Regularly remove dirt from the casing of the unit to prevent corrosion damage and clogging of the air grids. Pay attention that all the plates at the unit are always clean and legible.

10 Repair

10.1 Repair of unit

In case of malfunction during the warranty period the unit must be sent to the LAIRD THERMAL SYSTEMS service department for repair (see page 7). When warranty has expired, no restrictions from the side of LAIRD THERMAL SYSTEMS exist with respect to repair work carried out by the customer as long as guarantee and warranty conditions remain untouched. In any case only expert staff is authorized for doing repair work.

PLEASE NOTE

When doing repair work on the unit always be aware of the safety regulations as defined on page 9.

11 Dismounting, Disposal, Storage

11.1 Temporary Placing out of Operation

For placing the unit out of operation for maintenance or repair follows the steps below:

- Cooling operation is finished.
- 1) Disconnect the unit from mains.
- 2) Remove all cabling from the unit.
- 3) Remove all hoses to and from the unit.

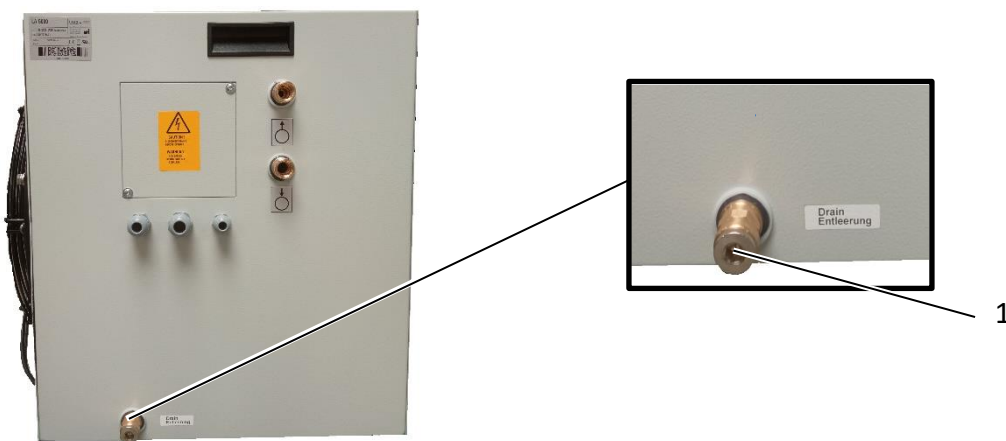


Fig. 12: Drain with cap

1	Cap
---	-----

PLEASE NOTE

The coolant has to be collected and disposed of according to valid regulations.

- 4) Let the coolant container run empty into an appropriate vessel.
- 5) Clean the unit.
- ⇒ The unit is placed out of operation.

11.2 Drain of unit

- 1) Open tank lid.
- 2) Place appropriate vessel under drain cap.
- 3) Open drain cap and release liquid from tank.
- 4) Blow compressed air through unit's liquid inlet to evacuate coolant from heat exchanger into tank.
- 5) Close tank lid and drain cap.

11.3 Re-packaging of the unit

- The unit has been emptied (see chapter 11.1).
- 1) Lift the unit with a forklift or jacklift and place a transportable pallet under it.
 - 2) Enclose the unit including the transportable pallet with shrinking foil and shrink the foil tight.
- ⇒ The unit is ready for transportation.

11.4 Storing the Unit

The storage area must be even and the unit should not stand on an edge or other obstructive object.

The environmental conditions for storage of the unit or parts of it can be found in the specification paragraph on page 16.

11.5 Disposal

The unit was manufactured mainly from recycable material.

Make sure the components of the unit end up at a qualified company for disposal and recycling.

Contact LAIRD THERMAL SYSTEMS for take back of end-of-life units (see company contact on page 7 or ask an qualified company for disposal and recycling.

11.6 Disposal of Operating Materials

The operating materials of the unit can be hazardous to the environment and to health.

- Make sure the operating materials are disposed of or recycled according to local regulations.
- Also, the safety specifications of the coolant manufacturer must be obeyed.

11.7 Return of the unit to LAIRD THERMAL SYSTEMS

PLEASE NOTE

Declaration of decontamination

Before re-shipment of the unit a declaration of decontamination must be sent to LAIRD THERMAL SYSTEMS.

12 Wear Parts and Spare Parts

12.1 Units wear and spare parts

Spare parts must comply with the technical specifications defined by LAIRD THERMAL SYSTEMS. Original LAIRD THERMAL SYSTEMS parts are subject to strict obligations and fulfill these requirements.

LAIRD THERMAL SYSTEMS does not provide warranty service in case of damages caused by the use of spare parts made by manufacturers other than LAIRD THERMAL SYSTEMS.

PLEASE NOTE

Identification data concerning the unit and spare parts

The type of unit and the article number can be found on the identification plate of the unit. The corresponding numbers in Fig. 12 as well as the part descriptions are listed in the spare part list.

Please direct your inquiries and orders to LAIRD THERMAL SYSTEMS (contact see page 7) with the following detailed information

- Type of unit
- Article number
- Serial number
- Part description
- Quantity
- Shipping details

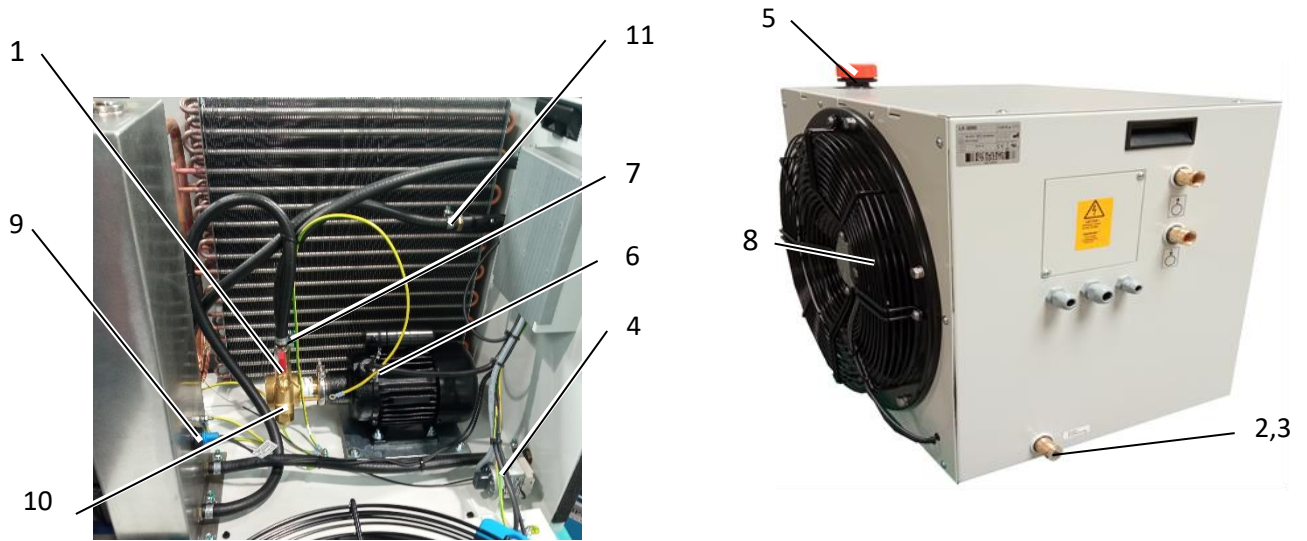



Fig. 13: Spare parts overview

Pos.	Qty	Description	Item No.
1	1	Pump	2118.00
2	1	Drain cap	2167.00
3	1	Gasket for cap	2119.00
4	1	Thermostat	2120.00
5	1	Cap	2121.00
6	1	Motor	95205201.00
7	1	Flexible coupling	2038.00
8	1	Fan	2122.00
9	1	Level switch	2123.00
10	1	Strainer (inside pump casing)	2081.00
11	1	Flow switch	2124.00

Table 12: Spare parts

Addendum


Flow scheme

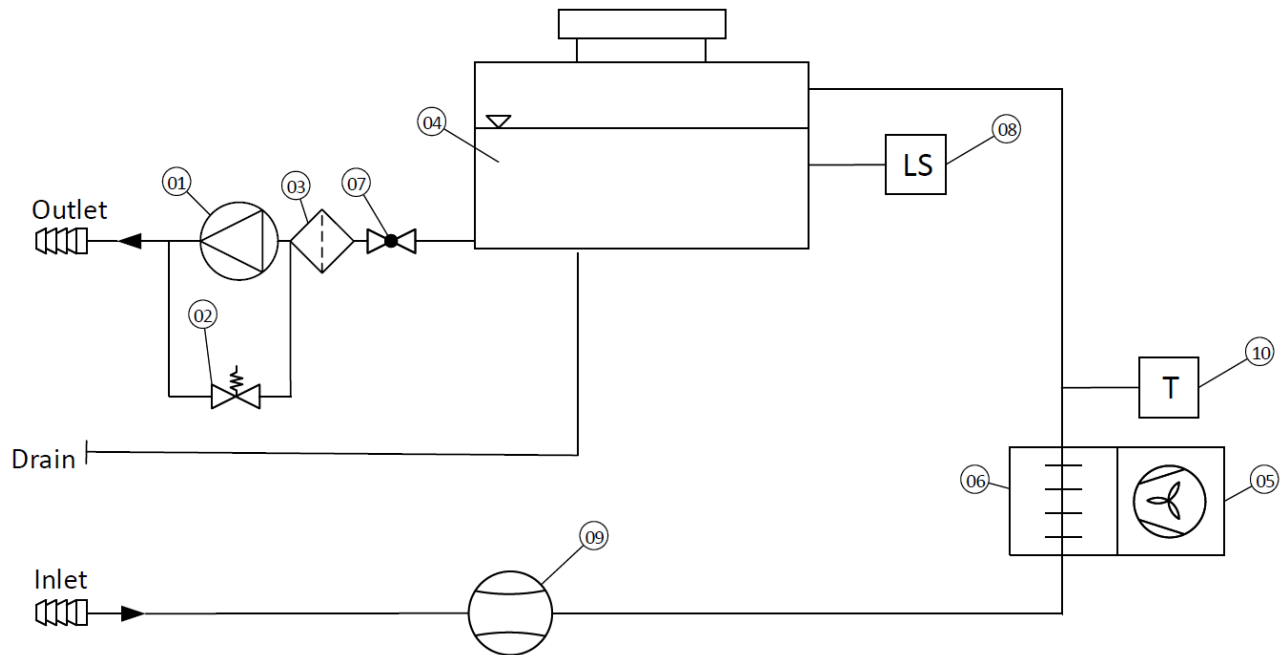

Pos	Description
-----	-------------

01	Pump
02	Relief valve, part of pump
03	Strainer, part of pump
04	Tank for coolant
05	Fan
06	Heat exchanger
07	Ball valve
08	Level switch
09	Flow switch
10	Thermal switch


Wiring diagram

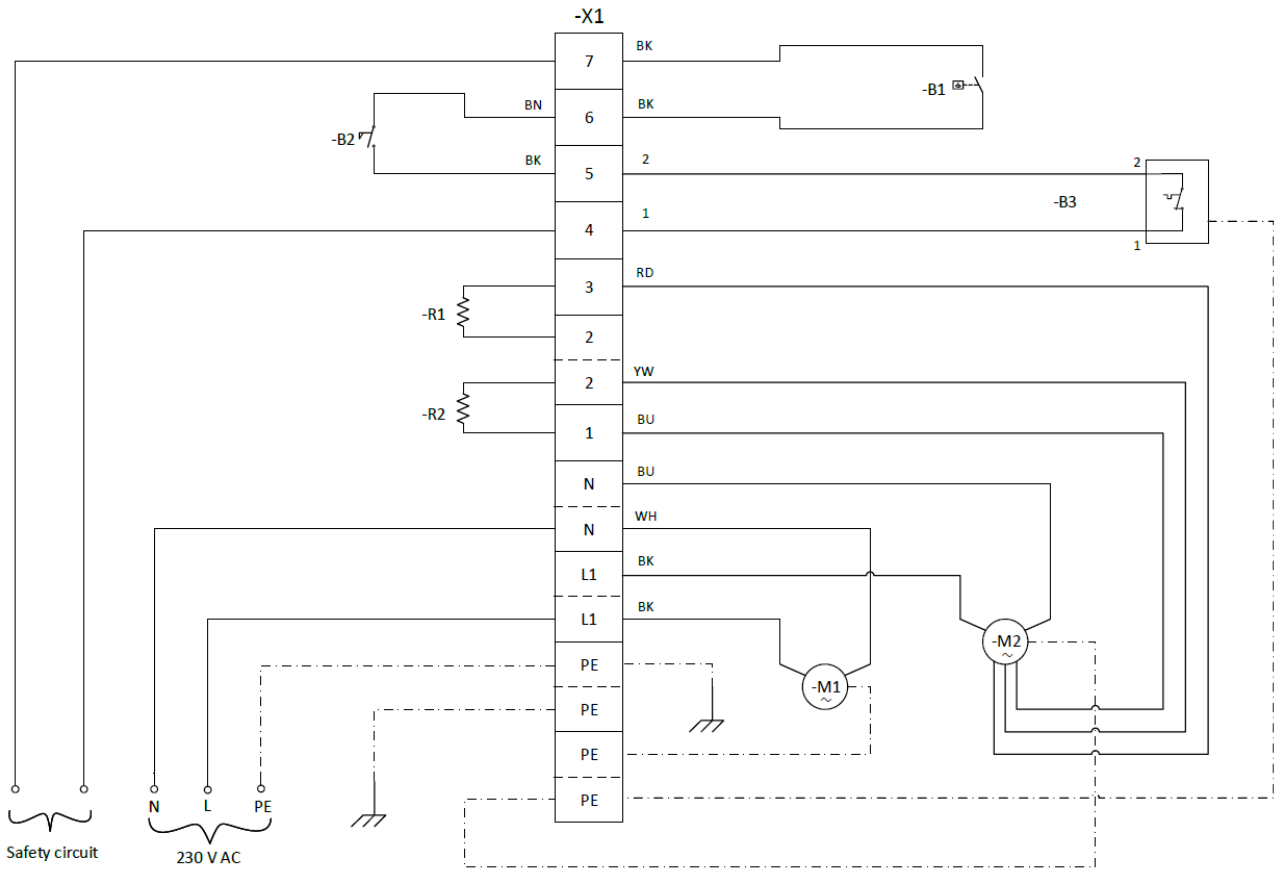



Legend

- B1 Level switch
- B2 Flow switch
- B3 Thermal switch
- M1 Pump
- M2 Fan
- R1 Resistor
- R2 Resistor
- X1 Terminal block


Dimensional drawing

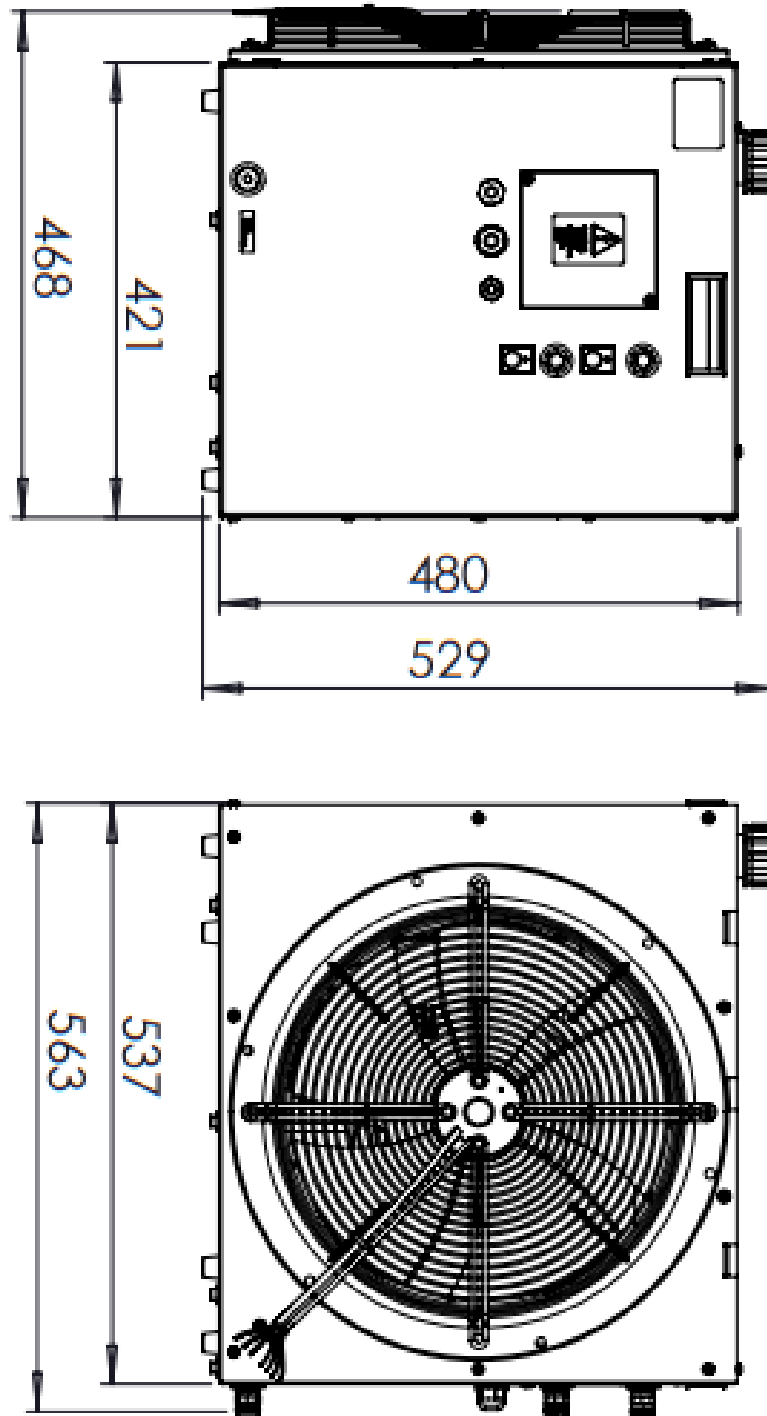


Performance diagram

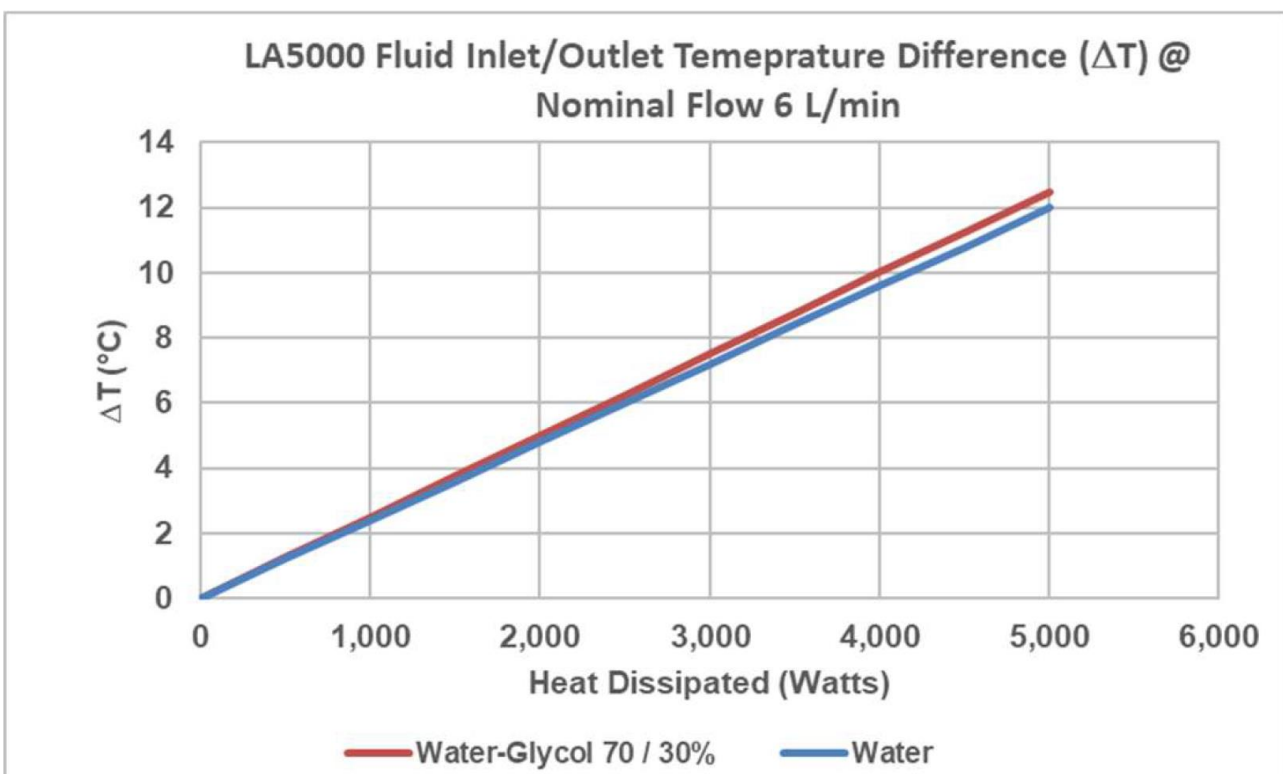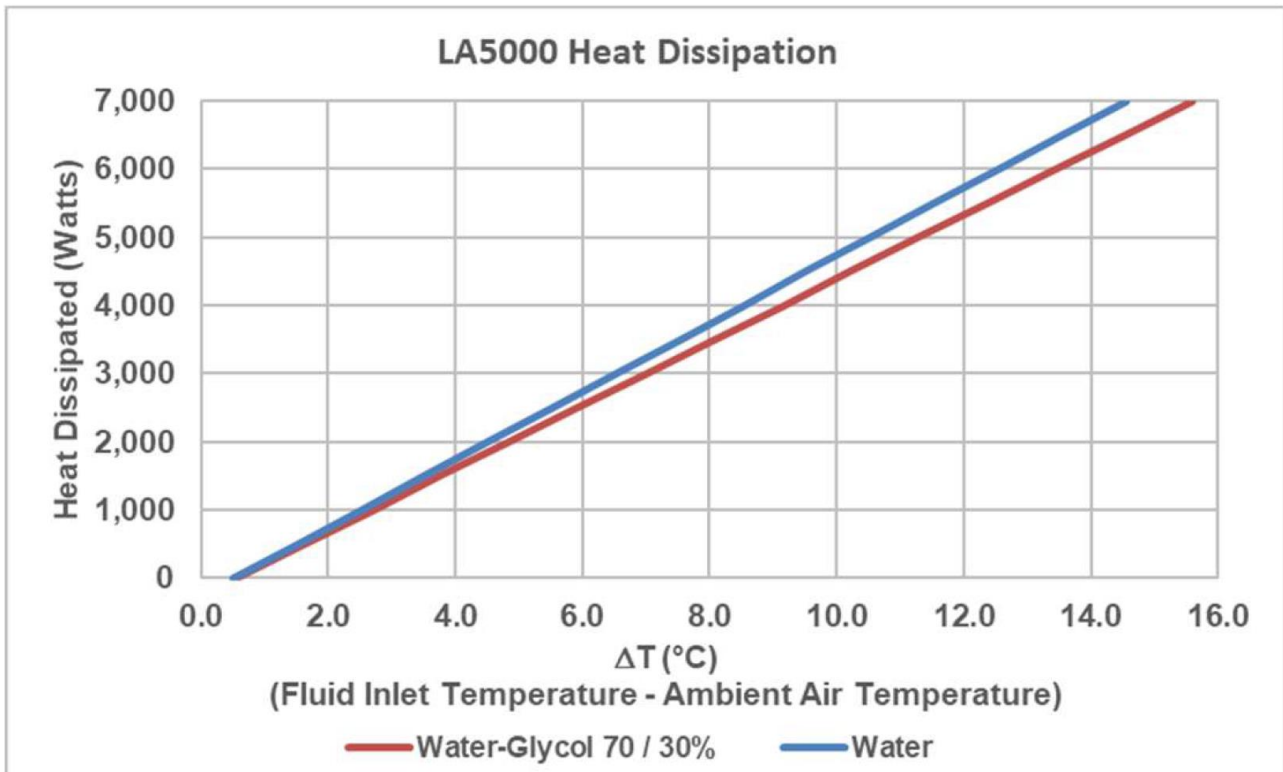

Flow versus pressure

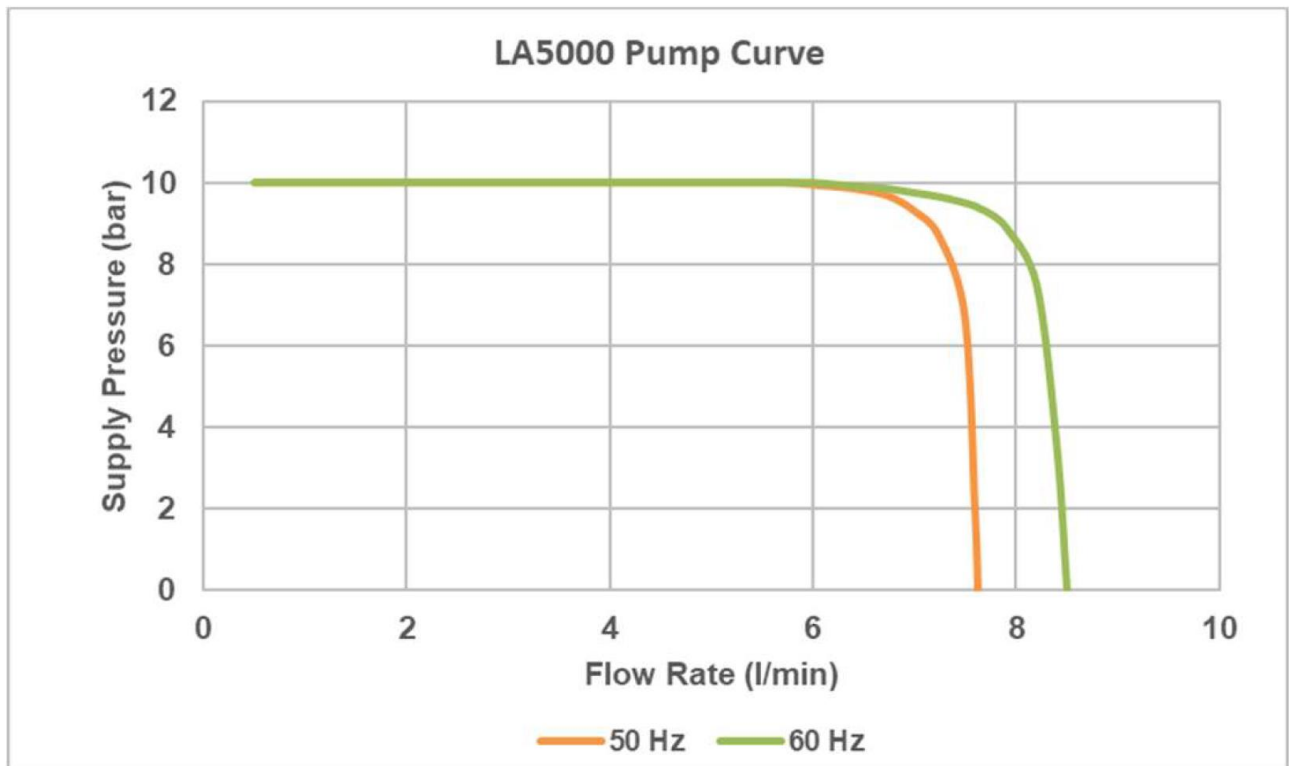

CE EC – Declaration of Conformity

<p>Manufacturer: Laird Thermal Systems s.r.o Address: Prumysklová 497, 463 12, Liberec, Czech Republic www.lairdthermal.com</p>	
<p>Declares that the machine indicated below: Category: Liquid cooling unit Name: LA5000 Type: 387009381</p>	
<p>Complies with the provisions of the following European directives and with the national laws transposing them: 2014/30/EU EMC Directive 2006/42/EC Machine Directive 2014/35/Low Voltage Directive</p>	
<p>Complies with the used harmonized standards: EN 12100:2010, EN 61000-6-2:2005, EN 61000-6-4:2007, EN 61000-6-4:2007 /A1:2011, IEC 61010-01:2010 UL 61010-1, 3rd Edition, May 11, 2012, Revised April 2016, CAN/CSA-C22 2 No. 61010-1-12, 3rd edition, Revision dated April 29 2016</p>	
<p>Place of discovery of the harmonized standards: https://single-market-economy.ec.europa.eu/single-market/european-standards/harmonised-standards/electromagnetic-compatibility-emc_en https://single-market-economy.ec.europa.eu/single-market/european-standards/harmonised-standards/low-voltage-lvd_en https://single-market-economy.ec.europa.eu/single-market/european-standards/harmonised-standards/machinery-md_en</p>	
<p>The machine must be used in accordance with the instruction manual of the machine.</p>	
<p>This declaration relates exclusively to the machinery in the state in which it was placed on the market, and excludes components which are added and / or operations carried out subsequently by the final user.</p>	
<p>Responsible for technical documentation: (Marcus Nyman, Product Development Engineering Manager)</p>	
<p>Quality responsible (name, title, email, signature): Frank Jassner, VP of Global Operations, frank.jassner@lairdthermal.com</p>	<p>Approval Date: 29-Aug-2022</p> 

LTS-QA-F-051, Rev.2